

on demand

Enjoy movies, TV shows, music videos, and more whenever you want with **On Demand***.

Access On Demand

You can access On Demand programs in several ways:

- From the **ON DEMAND** button on your remote
- From the **ON** icon on the **Quick Menu**
- From the **Main Menu**
- From an **On Demand** button on the **Flip Bar**
- From an **On Demand** channel in the TV Listings



Quick Menu



Main Menu



Flip Bar


Guide Symbols to Know – On Demand Action Icons

	Go back to the previous screen		Resume play of the video
	Order the program, or cancel an ordered program		Restart the video from the beginning
	Tune to a program (for free and subscription programming)		Delete the title from your rented titles list
	Watch a free preview		Indicates the program is available as part of a package
	Place a Lock on the program to restrict viewing		Cancel selection

Use the **PAGE UP** and **PAGE DOWN** buttons to advance forward or backward 5 minutes. Times may vary.

Watch On Demand Programs

Use your remote to pause, fast-forward, rewind, and stop the program. You may also use the DVR control buttons on your remote.

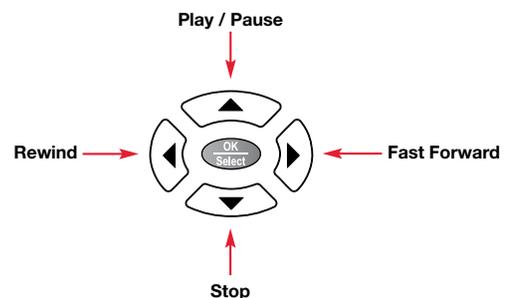

*On Demand not available in all areas. On Demand programs may not be recorded with DVR (if available).

Order On Demand Programs

The **On Demand Menu** displays a variety of programming categories. Use the ◀ ▶ ▲ ▼ buttons on your remote to select a category and press **OK/Select** to access listings for the category, or press access sub-category menus.*

Select a title by pressing **OK/Select** or **INFO** to access detailed information, including program length, cost, rating, and description.



Order From the On Demand Preview Banner

Use the **BUY** Icon from the **On Demand** preview banner to easily purchase while watching the preview.

- Select the **BUY** Icon and press **OK/Select** to order the **On Demand** program
- Select the **🔄** Icon and press **OK/Select** to return to the **On Demand** information screen



To buy the program, highlight the **BUY** Icon, and follow the on-screen prompts to complete your order. If the program is available at no cost,** the **🔄** Icon will appear instead of the **BUY** Icon. Your selection will begin playing immediately and you can watch as often as you want during the rental period.



Expiring Programs Display

On Demand programs with a specified expiration date in the list, e.g., Ends 8/12. Programs without a specific end date will be denoted as **LC** or **Last Chance**.




* Menu label and categories vary by cable provider.
 ** May not be available in all areas.

Status Bar

The On Demand **Status Bar** displays when you press **PLAY**, **PAUSE**, **REWIND**, **FAST FORWARD** or **STOP** on your remote and indicates where you are in the program that is playing.

If you have stopped a program and want to come back to it later, select **My Rentals*** from the **On Demand Menu**.

- Highlight and select a title to see the information screen that displays your remaining rental time and other program details
- Select **▶** to start watching where you left off or select **⏪** to start the program from the beginning
- Watch as many times as you want within the rental period

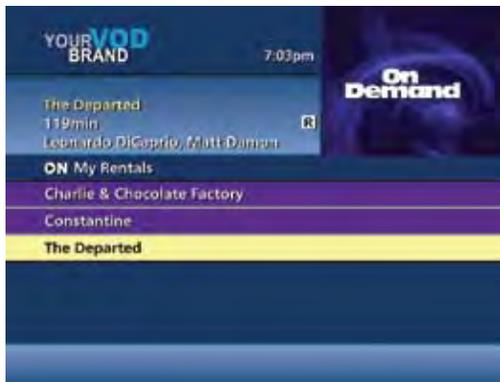

On Demand Packages

Some programs may be available as part of a package. If a program is available in a package, or available with a subscription service, a notice will appear on your screen. You can select:

- BUY** Icon to continue with the purchase,
- 📦** Icon to learn more about the package or
- 🚫** Icon to cancel.

*Note: Some **On Demand** programs that are free or part of a subscription may not appear on the **My Rentals** list. These programs can be accessed at any time from the **On Demand** listings.*



*Menu label varies by cable system.